

The logo for Everle, featuring the word "EVERLE" in a bold, white, sans-serif font with a stylized 'A' that has a small triangle inside it. The logo is set against a green background with a subtle wave pattern.

delivering excellence in communications




VT 9000 Wireless DECT headset

Connecting two Wireless DECT headset

Delmar Marina

Version 1.0 Released

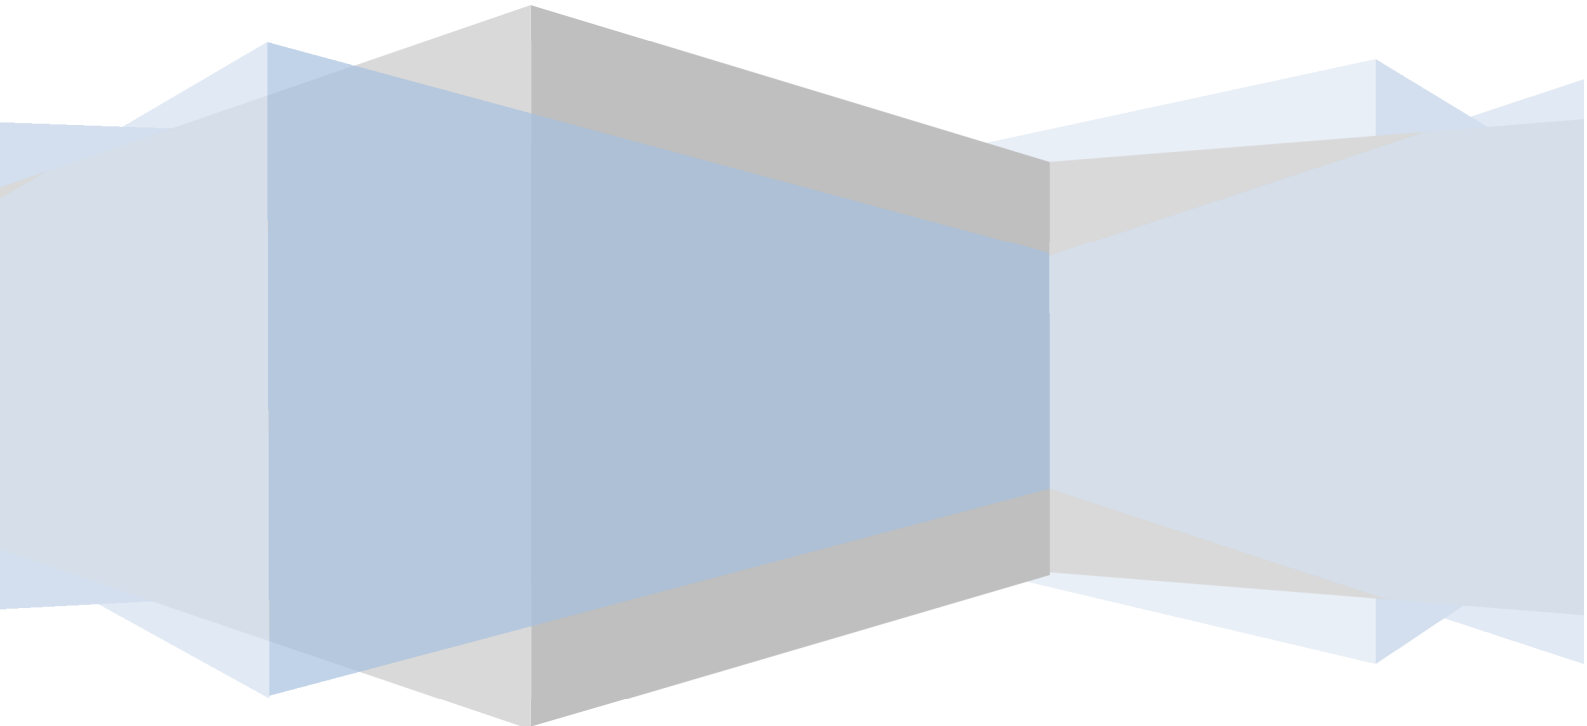

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written permission of Everlea Group Limited.

This document is the property of Everlea Group Limited, and may not be disclosed to any third party without the consent of Everlea Group Limited.

Table of Contents

| | |
|---------------------------------|---|
| Document Revision History | 2 |
| Reference Documents | 2 |
| Introduction..... | 3 |
| Pre-Requisites..... | 3 |
| Connecting Procedure..... | 3 |

Document Revision History

| Edition | Date | Comment | Author(s) |
|---------|------------|--|---------------|
| 0.1 | 10/01/2017 | Initial version created. | Delmar Marina |
| 1.0 | 11/01/2017 | New revision finalised and released as Release 1.0 | Delmar Marina |

Reference Documents

| S/No | Document Number | Document Title | Document Date | Author(s) |
|------|-----------------|--------------------------|---------------|-----------|
| 1 | N/A | VT 9000 DECT User Manual | N/A | N/A |







Introduction

This document describes the procedures on how to connect two VT 9000 Wireless DECT headset with a desk phone.

Pre-Requisites

This procedure can be initiated with one desk phone (without a lifter and headset port) connected to a phone line and with the complete package of two VT 9000.

Procedure

1. On the desk phone, unplug the handset cable from the phone body and connect the handset cable to the port marked  on the first base.
2. Plug the supplied telephone cable from port marked  on the first base, and then plug the other end of the cable to port marked  on the second base.
3. On the second base, please connect the supplied telephone cable from port marked  and connect the other end of the telephone cable into the handset port on the desk phone.

Please see image below of the setup.

